








CABINET NAME: FULLY SHELVED WARDROBE

PART BREAKDOWN - ALL PARTS REQUIRED TO BUILD CABINET



CABINET PANELS	
①	Top Panel
②	Left Hand Gable
③	Right Hand Gable
④	Adjustable Shelf
⑤	Back Panel
⑥	Back Toe
⑦	Front Toe
⑧	Bottom Panel
⑨	Pegs

CABINET PARTS	
	24x Rafix
	24x Rafix Pins USE A PHILLIPS Screwdriver
	Hinges & Plates 4x (Single Door) 8x (Double Door)
	24x Shelf Pegs
	4x Robe Adjustable legs
	1x Phillips Screwdriver NOT SUPPLIED

KEY

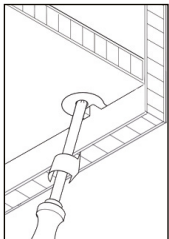


Gives
impression
to Tighten
Rafix

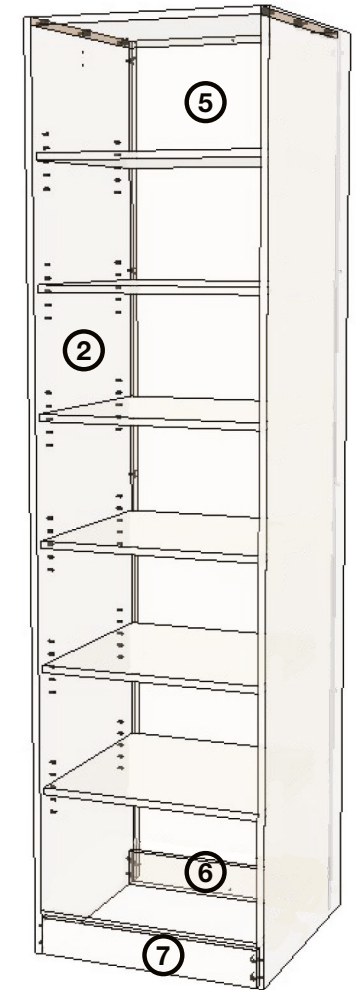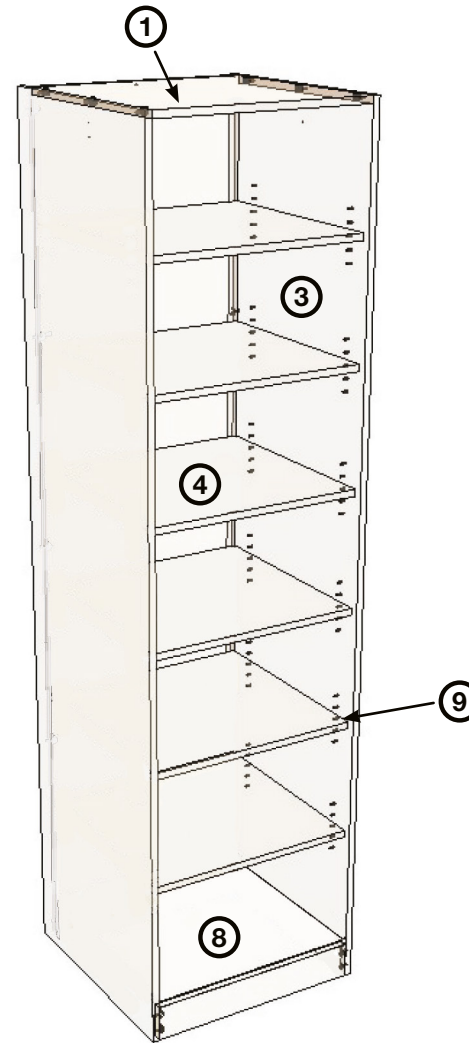


CABINET NAME: FULLY SHELVED WARDROBE
BEDROOM CABINET INSTALLATION INSTRUCTIONS

STEP 1

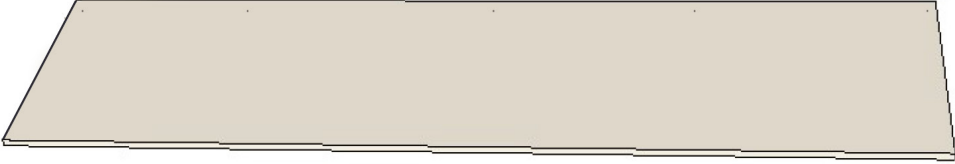

Start with the hinged gable flat on the ground, knock in the hinges


STEP 2

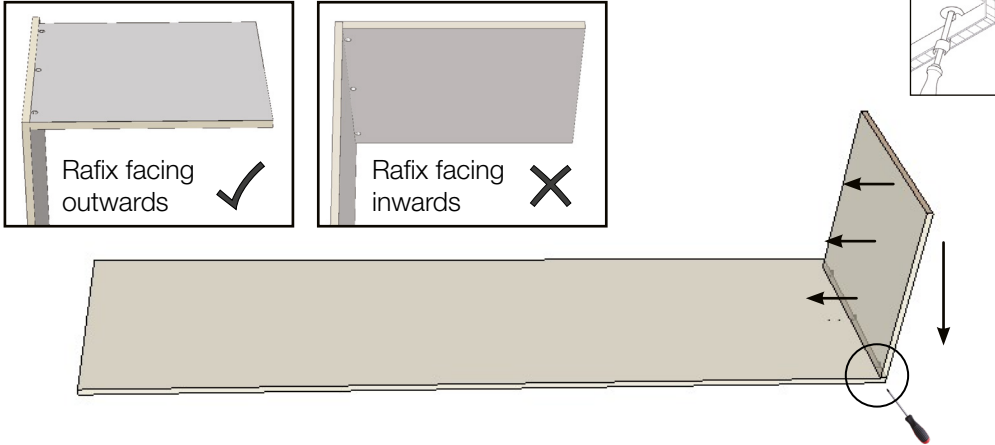

Rafix facing outwards ✓
Rafix facing inwards ✗

Attach the top panel, tighten the rafix with a screwdriver


STEP 3

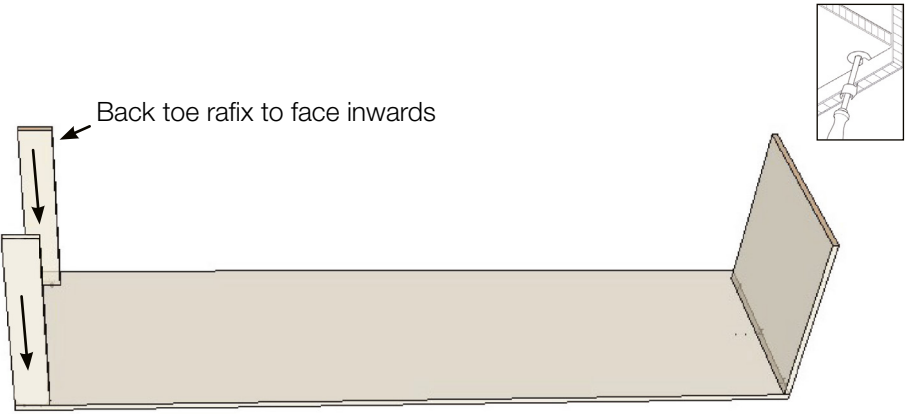

Back toe rafix to face inwards
Front toe rafix to face inwards

Attach the front & back toe panels, tighten the rafix with a screwdriver

STEP 4

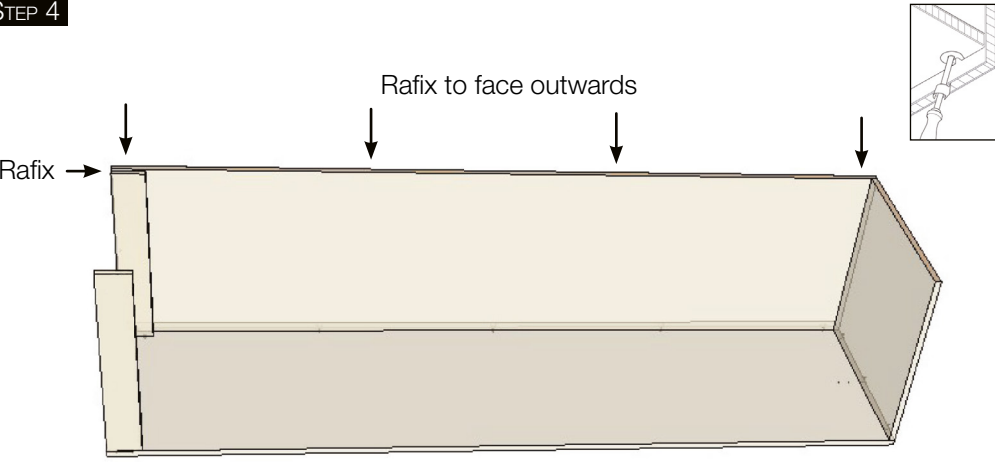

Rafix to face outwards
Rafix



Place the back panel onto the rafix pins - tighten the rafix with a screwdriver

CABINET NAME: FULLY SHELVED WARDROBE

BEDROOM CABINET INSTALLATION INSTRUCTIONS


STEP 5

Add the feet to the base of the gable - Feet to be added between steps 5 & 6

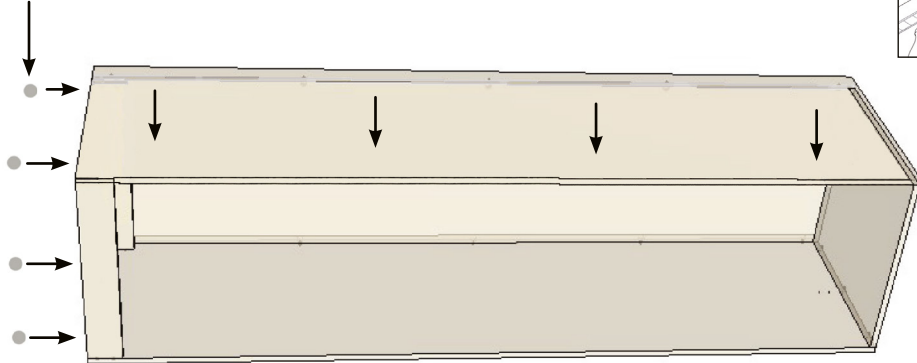


Place the left hand gable onto the cabinet and tighten remaining Rafix to secure the cabinet

STEP 6

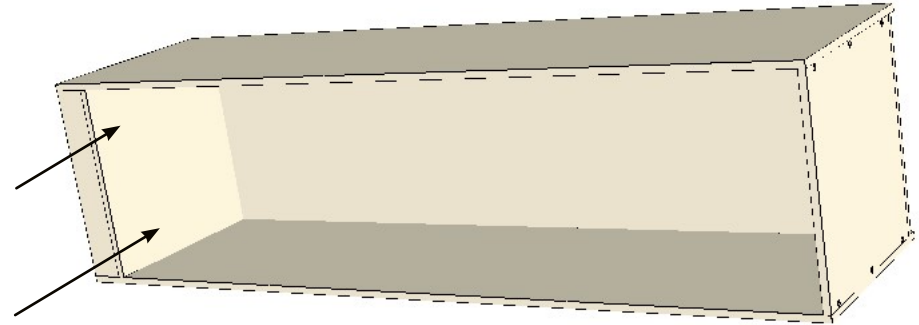

Slide in the bottom panel from the front

STEP 7

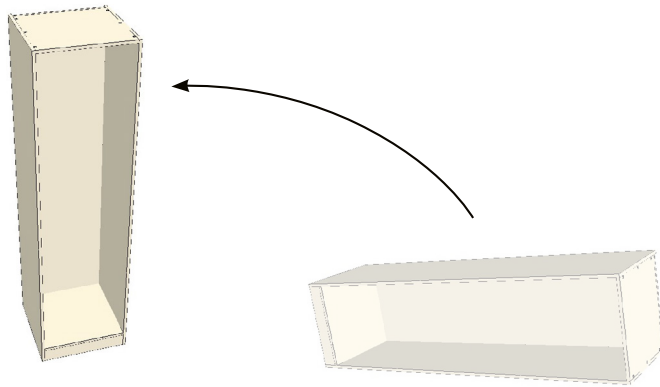

Stand the cabinet up ONCE THESE STEPS ARE COMPLETED

STEP 8

